

# TensorGrip®



# F52

## FAST FLASH DCM FREE SPRAY ADHESIVE


**TensorGrip® F52** is a versatile Upholstery Adhesive suitable for many bespoke or production line type applications. **TensorGrip® F52** is a contact adhesive but can successfully be used single sided with certain materials due to its high tack. Most common materials such as Foams, fabrics, headliners can be bond to substrates such as Plywood, MDF, Metals, Rigid plastics and GRP with excellent bond strength. **TensorGrip® F52** is EPS & XPS compatible. *Not recommended for use with flexible PVC or unbacked Vinyls unless tested.*

### ADVANTAGES

- Quick Drying Formula.
- EPS & XPS Compatible.
- DCM Free Formula.

### TECHDATA

#### SQUARE METRE COVERAGE (m<sup>2</sup>)\*:

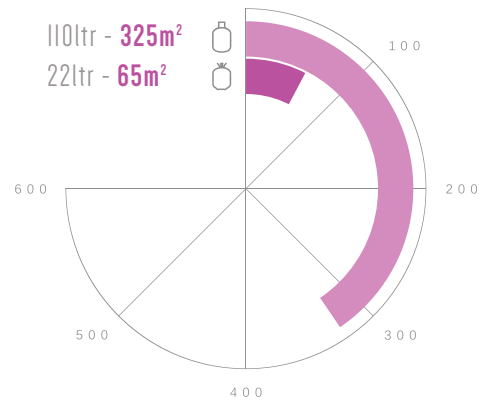

#### APPLICATION:



1 or 2 sided

#### FLASH-OFF\*:



1 - 2 mins

#### OPEN TIME\*:



Up to 45 mins

#### COLOUR:



Clear

#### SUITABLE FOR:



Foam



Fabric



Plastic



Plywood



Polystyrene

#### PROPERTIES:



Web Spray

\*consult the Spray Manual for a more detailed tutorial on the bonding process.

\*depending on ambient temperature.

CHEMICAL TECHNICAL DATA

|   |   |
|---|---|
| Viscosity                                   | 300 - 600Cps  |
| Total Solids                                | 32%   |
| Colour                                      | Clear   |
| System Flammability                         | Flammable Adhesive in Flammable Propellant          |
| Shear                                       | 390N  |
| Peel  | 42N   |
| Shear adhesion failure temp (SAFT) 100grams | 80°C  |
| Heat resistance (25mm/100grams)             | 95°C  |
| Flash-Off                                   | 1 - 2 minutes depending on temperature and humidity |
| Open time                                   | Up to 45 mins                                       |
| Shelf Life                                  | 18 months from date of manufacture                  |

CANISTER STORAGE/CHANGE OVER

Turn valve on canister into the off position, spray out remaining adhesive left in the hose, disconnect the spray hose and gun from the canister. Reconnect the spray hose to a canister of cleaning solvent (sold separately) and spray out until liquid is clear which indicates that the hose and gun is clean. If you choose to leave the hose and spray gun on the canister, leave the valve on the canister open. Do not disconnect the hose/gun from the canister. Close and lock the spray gun.

HANDLING & STORAGE

- Consult Safety Data Sheet prior to use.
- DO NOT store at temperatures over 50°C.
- Avoid exposure to direct sunlight.
- DO NOT store directly on concrete floor.
- For optimum performance, store at 18°C during use, but must always be above 10°C.
- When connected, keep valve open and hose pressurised at all times.
- DO NOT close valve until ready to connect to new cylinder.
- Release pressure in hose before disconnection.
- Always test product to determine suitability for your particular application prior to use in production.

DIRECTIONS FOR USE


- This product is designed to be applied to two surfaces to be bonded together or single sided for lower demand applications. For best results, the temperature of the adhesive and the surfaces being bonded should be between 60 °F - 80 °F (16 °C - 27 °C).
- Use with adequate ventilation. When possible we recommend shaking the canister well before using.
- Attach and secure hose tightly onto the spray gun with required tip. Attach the other end of the hose onto the canister. Make sure the hose-valve connections are securely tight. Open the valve on the canister slowly and fully, check for leaks during this process. Unlock the trigger on the spray gun to start spraying.
- Prior to use, check compatibility by spraying a small test patch of the adhesive on the substrate. This product may degrade some substrates.



1. Make sure that surfaces are clean, dry and free from dirt, dust, oil, loose paint, wax or grease, etc.



2. Spray about 10-20 cm (4" – 6") away at a 90° angle to the surface, applying a uniform, even coat of adhesive to obtain 80% to 100% coverage of the surface. If necessary, spray another coat of adhesive in areas that appear to need more adhesive.



3. Spray both surfaces to be bonded, one surface vertically and the other surface horizontally (or single sided for lower demand applications).



4. Allow 1 - 2 minutes for the adhesive to tack off until no adhesive transfers to the knuckle when touched.




5. Adhere surfaces and press together with adequate pressure. A roller is recommended to apply a uniform pressure to achieve maximum strength. Allow 24 hours for the adhesive to fully cure.

6. If the spray tip clogs, unscrew the spray tip from the gun and clean with solvent such as lacquer thinner or acetone. Do not use a pin on the spray tip.

COVERAGE



COVERAGE TOO LIGHT

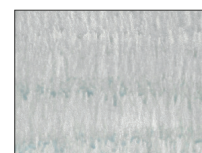

COVERAGE TOO HEAVY



CORRECT APPLICATION = 20 dry gms/sqm